Sliding Screen Door Measuring Guide

Measure near the center of the opening because openings can settle over time.

IMPORTANT: Record ALL measurements to the nearest 1/8".

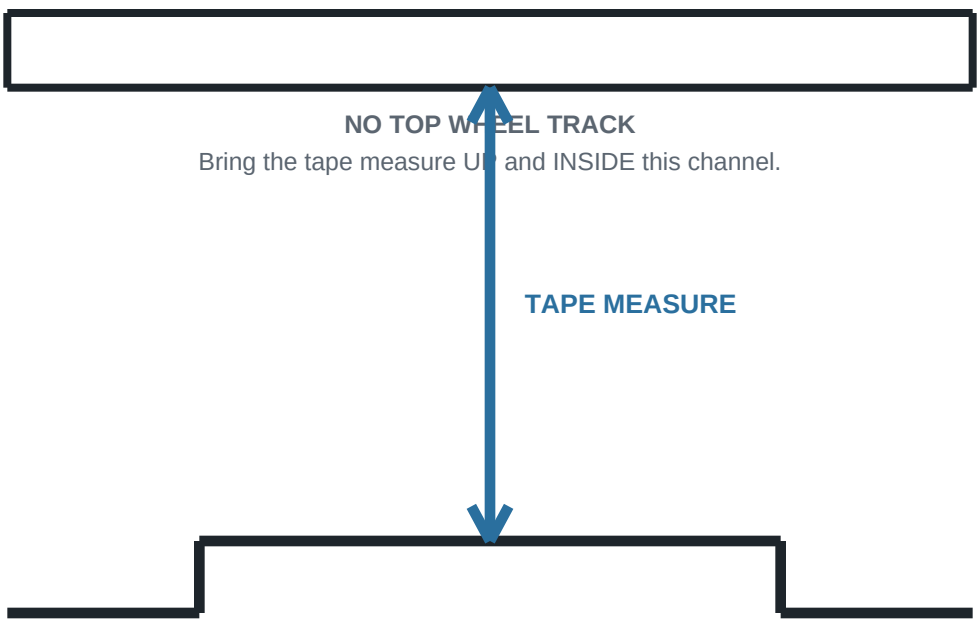

1. Measure near the CENTER of the doorway.
2. Set the tape on TOP of the bottom roller-track lip.
3. Bring the tape straight UP and INSIDE the top channel.
4. Record the exact opening height to the nearest 1/8".
5. Reduce approximately 1/4" to allow roller adjustment and balancing.

Measured Opening - Approx. 1/4" = Screen Door Height

Give the opening measurement to the nearest 1/8".

Sliding screen door measuring reference